

# SPOTCLEAN® CORDLESS PORTABLE CARPET AND UPHOLSTERY CLEANER

### MODEL 3681F

Important Safety Instructions2	Using Your Machine5
What's in the Box?3	Emptying the Dirty Water Tank6
Assembly and Charging3	Cleaning and Storing Your Machine7
Filling the Formula Tank 4	Limited Warranty 8










## **Product Overview**

- 1. Control Panel
  - A. Battery Status Indicator
  - B. Power Button
  - C. Mode Selector
- 2. Dirty Tank Lid
- 3. Dirty Tank Handle
- 4. Dirty Tank (Float Stack inside)
- 5. Carry Handle
- 6. Clean Tank Handle
- 7. Charging Port
- 8. Hose
- 9. Hose Release Latch

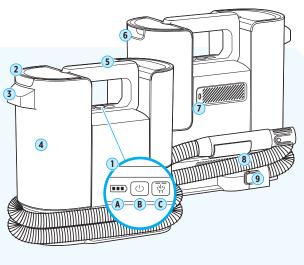

SYMBOL	EXPLANATION	SYMBOL	EXPLANATION	SYMBOL	EXPLANATION
<u>^</u>	Caution.	₽□К	Detachable power supply unit.		Use warm water, temperature up to 60°C.
	Read operator's manual.	***	Do not freeze.	A	Lock.
	Risk of fire.	X	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.		Class III appliance.
A	Risk of electric shock.			===	Direct current.
	For indoor use only.			Li-ton	Recycle Li-lon battery.
	Do not expose to rain.			8+(1)	Suitable for use by children at least 8 years old.
	Store indoors.	Ā	This symbol means to recycle. Do not mix batteries with general household waste. Recycle used batteries at your nearest recycling center.		Warning: Slippery surface.
	Do not overwet carpet. Use only on carpet moistened by cleaning process.				Class II equipment.
	Use only BISSELL® cleaning formulas intended for use with this machine.		Allow parts to dry.	9	Safety isolating transformer, short-circuit proof.
	Disconnect power before servicing.		Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.	(IS)	Power supply unit, switch mode; switch mode power supply unit.
溪	Always turn unit off prior to charging.			<b>♦•</b> •	Polarity of D.C. power connector.

## IMPORTANT SAFETY INSTRUCTIONS

### READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

## This appliance is not intended for use by persons (including children) with reduced physical, sensory or

- mental capabilities, or lack of experience and knowledge. unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Children should be supervised to ensure that they do not
- play with the appliance.
- Do not immerse in water or liquid.
- · Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- If the charger supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- This appliance contains batteries that are only replaceable
   Dispose of used batteries promptly.
- by skilled persons. Under abusive conditions, liquid may be ejected from
- the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance. Liquid must not be directed towards equipment
- containing electrical components.
- Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance,

- and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Do not use with damaged cable or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- The appliance must be disconnected from the supply mains when removing the battery.
- Use only the type and amount of liquids specified under the
- operations section of this guide.
- Turn OFF all controls before unplugging.
- · Do not pull or carry charger by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- Keep charger cable away from heated surfaces.
- To unplug, grasp the charger plug, not the cable.
- Do not handle charger plug or appliance with wet hands.
- · Battery pack and charger base output terminals are not to be short-circuited.
- · Do not charge the unit outdoors.
- Do not recharge, disassemble, heat above 60°C. or incinerate.
- Keep batteries out of reach of children.
- Prevent unintentional starting. Ensure the switch is in the OFFposition before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in

- the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-30°C when
- charging battery, storing unit or during use. Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Use only as described in this user guide
- Use only manufacturer's recommended attachments.
- · If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- · Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust. lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids. such as petroleum, or use in areas where they may be
- Do not pick up toxic material (chlorine bleach, ammonia. drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- · Floor slippery when wet.
- If the pins of the plug parts are damaged, the plug-in

- power supply shall be scrapped.
- · Recycle batteries, do not mix with household waste.
- Do not use non-rechargeable batteries.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Always install float before any wet pick-up operation.
- This appliance contains lithium ion type batteries that are non-replaceable.
- The battery is to be disposed of safely. See global.BISSELL.com
- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- CAUTION: Only allow children at least 8 years old to use the battery charger. Give sufficient instruction so that the child is able to use the battery charger in a safe way and explain that it is not a toy and must not be played
- with. Instruct the child not to try and recharge nonrechargeable batteries because of the danger of eruption.
- Examine the battery charger regularly for damage, especially the cord, plug and enclosure. If the battery charger is damaged, it must not be used until it has been renaired
- · WARNING: Only use with the following charger model: S030-1B297100HA or SSC-297100AU.

### SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 100-240V-. 50/60HZ POWER SUPPLY ONLY. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

## IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store unit where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

## TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

To see what's included with your purchase, check the "Carton Contents" list on the top flap of the box.















Machine

Hose Clip

Hose

Charger


Tools (vary by model)

 
Trial Formula(s) (vary by model)

 
# **Assembly and Charging**




Important: Plug in the machine immediately upon receiving. For maximum run time (up to 30 minutes in Eco mode), charge for 4 hours before use.

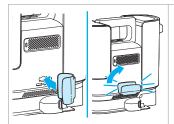

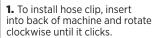


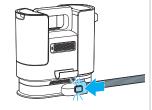


2. Attach the hose. It will click into place.

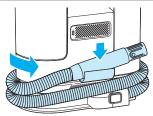 


  3. Wrap hose around bottom of machine and place on hose clip.

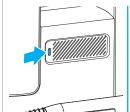

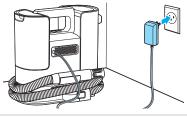

 4. With machine switched OFF, insert charger into port The charging port door slides out of the way when charger is inserted. Plug the charger into a wall outlet.

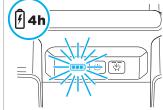

**5.** The battery status indicator lights will illuminate when charging.

## Filling the Formula Tank



This machine is compatible with BISSELL® formulas made for portable carpet cleaners. Always use genuine BISSELL formulas in your machine. Use of other cleaning formulas may harm the machine.



Pretreat spots and stains to improve carpet cleaning performance.



Keep plenty of BISSELL formulas on hand so you can clean whenever it fits vour schedule.



Add Boost carpet cleaning formula enhancers to any formula to increase its effectiveness.





1. Choose your formula.\* Scan the QR code with your smartphone camera or visit global.BISSELL.com for formulas.

2. Remove clean tank by gripping clean tank handle and lift up.

3. Unscrew cap.



4. Fill with warm (140°F/60°C MAX) water to fill line based on the size of your mess. Do not use boiling water. Do not heat water in microwave.

Small Area: 414mL Large Area: 828mL



5. Add formula to the corresponding fill line.

Small Area: 59mL Large Area: 118mL



6. Replace and tighten cap onto tank. Align tank with machine and press down until it clicks into place.


\*Compatible BISSELL formulas include: Spot & Stain, Pet Stain & Odour, BOOST Oxy

## **Using Your Machine**

### Before You Clean

- Ensure your machine is fully charged.
- Vacuum to remove loose dirt from areas to be cleaned.
- Spray any BISSELL stain pretreat formula on soiled areas and allow to sit for a few minutes.
- Tip: For upholstery, work in small sections until area is clean.

## Attaching and Using the Tools

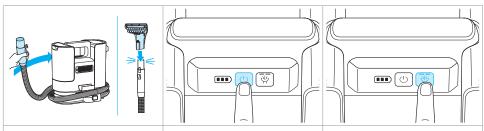

- 1. Unwrap hose. Attach your desired tool to end of hose grip until it clicks.
- 2. Press power button ON.
- **3.** Select **cleaning mode**. See below for more information.



4. Point tool above stain and press and hold trigger to mist solution over affected area.



5. Release spray trigger and gently scrub stain using bristles



6. Apply firm downward pressure with tool and slowly pull it toward you to remove stain. Release trigger and make "dry passes" to remove any remaining moisture. Repeat as needed until no water can be seen in nozzle.

## Cleaning Modes



**Eco Mode ENERGY-EFFICIENT POWER** 

Ideal for cleaning upholstery, flight of stairs, and auto interiors. Run time up to 35 minutes.



**Turbo Mode** HIGHEST SUCTION POWER

Ideal for pet messes, spills, and tough stains. Run time up to 20 minutes.

# **Emptying the Dirty Water Tank**





**1.** Empty dirty water tank when it reaches the "MAX" line. Do not let the water level fill above the MAX line.

Note: The machine's pitch will change and suction will stop once the MAX fill line has been reached.



2. Remove dirty water tank by tilting outward and carry to a disposal area.



3. Pull up on the dirty tank lid to remove.



4. Pour out dirty water and rinse tank.



5. Reinstall the tank lid.




6. Reinstall tank at an angle until it clicks into place.

# **Cleaning and Storing Your Machine**








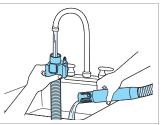

1. Power OFF. Remove and rinse the tools under clean. running water. Allow tools to drv.

2. Press the release lever on the hose to remove from machine.

Rinse hose with clean water. Lift end of hose and stretch out to ensure all water is removed. Let dry completely before reattaching. It will click into place.

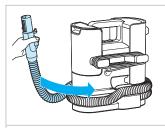

**4.** Wrap hose for storage. Store indoors in a secure. dry location.

## Using the HydroRinse<sup>™</sup> Tool (select models)

Use to clean out your hose after each use.



1. Attach tool to end of hose grip until it clicks.



2. Hold the hose and tool in an upright position with the machine ON. Hold down the trigger for 30 seconds. Be sure to empty the dirty water tank after use (see page 6).

Note: Other maintenance or service not included in the manual should be performed by an authorized service representative.

**NOTICE:** To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result. Store machine in protected, dry area at room temperature (4°C - 40°C).

## **Limited Warranty**

This limited warranty is provided by BISSELL® International Trading Company B.V. ("BISSELL") and applies in Australia and New Zealand. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under The Australian Consumer Law or New Zealand Consumer Laws, whichever applies to you. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and show the product was purchased in Australia or New Zealand to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at qlobal.BISSELL.com/privacy-policy.

### **Limited Two-Year Warranty**

For two years from the date of purchase by the original purchaser, subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

#### \*Conditions of Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty.

This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that

repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELI's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### **Important Notes**

Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.

Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty.

Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.

#### **Consumer Care**

If your BISSELL product should require service or to claim under our limited guarantee, please contact us.

#### Australia

Telephone: 1300 247 735 Website: BISSELL.com.au

Address: 789 Springvale Road, Mulgrave, Victoria 3170

Email: consumercareau@bissell.com

#### **New Zealand**

Telephone: 0800 247 735 Website: BISSELL.co.nz

Address: 789 Springvale Road, Mulgrave, Victoria 3170

Email: consumercarenz@bissell.com